



r u b e
PRODUCTOS TÉCNICOS S.L.

Camíño do bosque, 11
Apdo 73 - 36417 - Mos
Pontevedra - SPAIN
Tel: +34 986 344 090
Fax: +34 986 344 864
rube@rubept.com
www.rubept.com



PRFV SUPPORTED LOADS

LOADS ISO 15

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	321	2	2685	3
400	258	3	1041	3
500	203	3	593	4
600	159	4	355	5
700	122	5	282	6
800	199	6	97	6
900	116	7	89	7

LOADS ISO 25

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	642	2	5370	3
450	453	3	1930	4
600	318	4	710	5
750	205	5	366	7
900	180	6	195	8
1000	126	7	140	9
1200	113	8	105	10

LOADS ISO 30

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	816	2	11290	3
450	552	3	3334	4
600	427	4	1405	5
750	301	5	863	7
900	203	6	425	9
1000	175	7	352	9
1200	135	8	205	10

LOADS ISO 30 MICRO (14x14)

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	857	2	11855	3
450	580	3	3505	4
600	449	4	1475	5
750	316	5	907	7
900	214	6	447	8
1000	184	7	370	9
1200	143	8	216	10



r u b e
PRODUCTOS TÉCNICOS S.L.

Camión do bosque, 11
Apdo 73 - 36417 - Mos
Pontevedra - SPAIN
Tel: +34 986 344 090
Fax: +34 986 344 864
rube@rubept.com
www.rubept.com



PRFV SUPPORTED LOADS

LOADS ISO 30 (8x8)

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	1989	2	10610	3
450	878	3	3120	4
600	492	4	1310	5
750	314	5	670	7
900	218	6	386	8
1000	176	7	282	9
1200	122	8	163	10

LOADS ISO 38

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	1455	2	15015	3
450	1070	3	7130	4
600	762	4	2966	5
750	547	5	1475	7
900	455	6	902	8
1000	333	7	636	9
1200	290	8	410	10

LOADS ISO 50

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
500	1210	2	7885	2
800	915	4	2725	5
1000	745	5	1510	6
1200	595	6	850	7
1300	320	7	705	8
1400	260	8	540	9
1500	195	8	415	9



r u b e
PRODUCTOS TÉCNICOS S.L.

Camino do bosque, 11
Apdo 73 - 36417 - Mos
Pontevedra - SPAIN
Tel: +34 986 344 090
Fax: +34 986 344 864
rube@rubept.com
www.rubept.com



PRFV SUPPORTED LOADS—SAFET FLOORING

LOADS P 15

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	214	2	1155	3
450	95	3	341	4
600	53	4	143	5
750	34	5	72	7
900	23	6	41	8
1000	18	7	30	9
1200	13	8	17	10

LOADS P 25

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	1111	2	5808	3
450	489	3	1727	4
600	275	4	726	5
750	174	5	374	7
900	121	6	215	8
1000	99	7	157	9
1200	68	8	91	10

LOADS P 30

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	1914	2	10230	3
450	847	3	3003	4
600	473	4	1265	5
750	302	5	643	7
900	210	6	374	8
1000	169	7	271	9
1200	117	8	157	10

LOADS P 38

Spam (mm)	Point load (kg)	Safety factor	Distributed load (kg/ m ²)	Safety factor
300	3850	2	20460	3
450	1705	3	6050	4
600	957	4	2574	5
750	616	5	1309	7
900	425	6	759	8
1000	345	7	553	9
1200	239	8	319	10